


1. INSTALL JUNCTION BOXES AT LOCATIONS SPECIFIED ON PLANS.
2. ATTACH MOUNTING STRAP TO JUNCTION BOX. (BE CERTAIN BOX IS SUPPORTED BY STRUCTURAL CEILING)
3. THREAD CANOPY AND SLIP RING ONTO STEM.
4. THREAD LEADS FROM FIXTURE THROUGH STEM.
5. ATTACH STEM TO STRAP BY THREADING THROUGH CENTER OF STRAP (BE CERTAIN TO TURN STEM 2 COMPLETE REVOLUTIONS)
6. MAKE ELECTRICAL CONNECTIONS ACCORDING TO CODE.

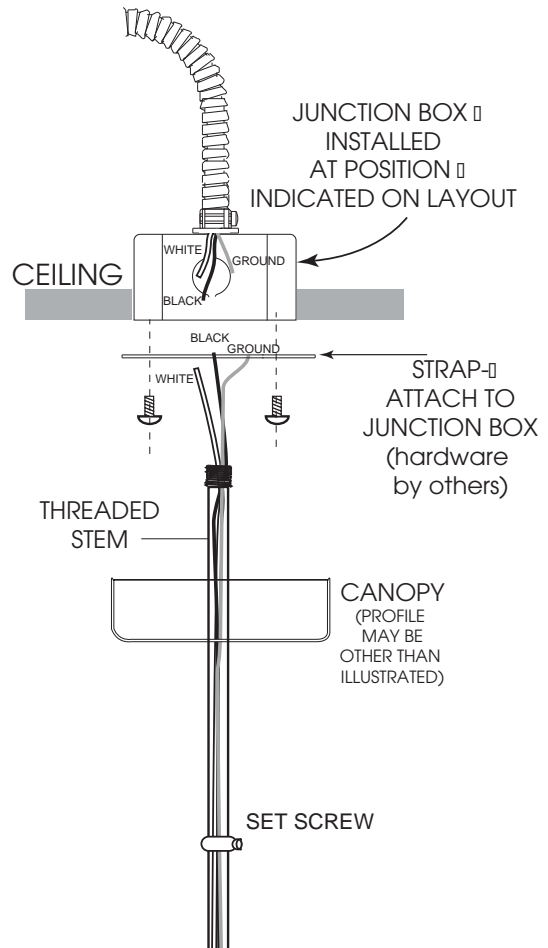

WARNING:
BE CERTAIN ALL POWER IS OFF.
WIRE ACCORDING TO LOCAL
AND NATIONAL CODES. THIS
PRODUCT SHOULD BE INSTALLED
BY A QUALIFIED ELECTRICIAN

7. BRING CANOPY UP TO CEILING LEVEL, SECURE BY RAISING SLIP RING UP TO CANOPY. TIGHTEN SET SCREW
8. THREAD LOWER END OF PENDANT STEM INTO FIXTURE FITTING, BEING CERTAIN THAT STEM COMPLETES AT LEAST 2 COMPLETE TURNS INTO FIXTURE.
HEIGHT MAY BE ADJUSTED FURTHER BY USING THREADED ENDS OF THE STEM AT CEILING LEVEL AND AT FIXTURE LEVEL

