



WARNING: Be certain all power is OFF! Wire according to local and national codes. This product should be installed by a qualified electrician.

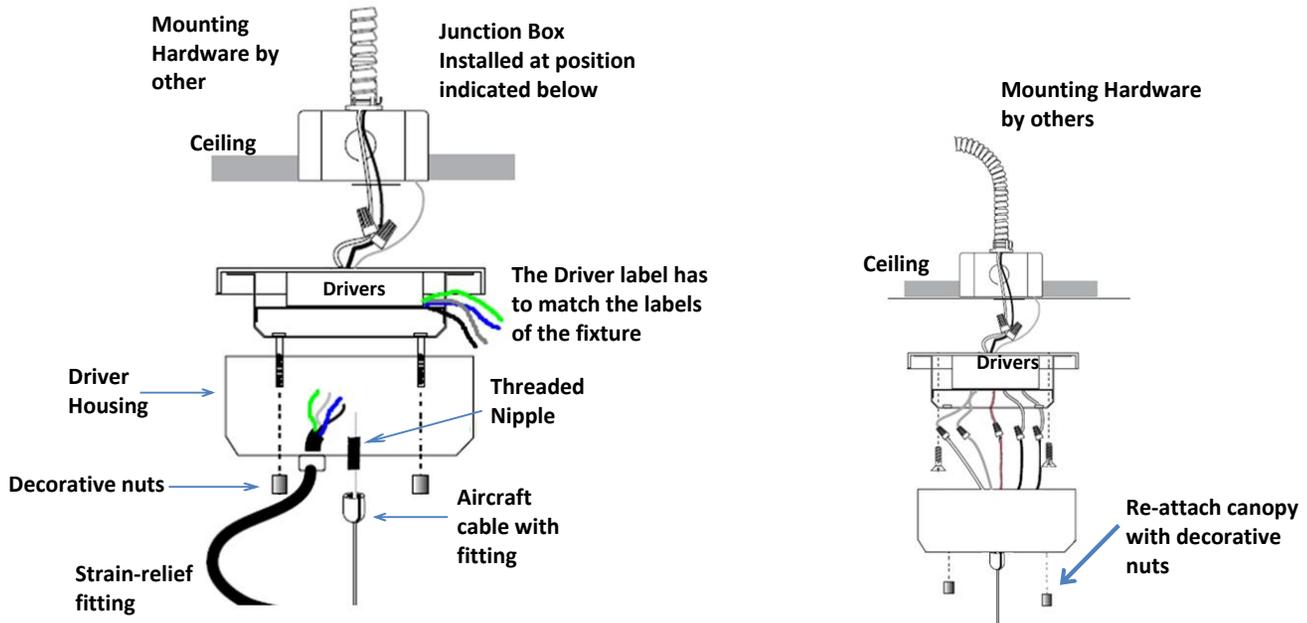

Before starting the installation, unscrew the two decorative nuts of the Driver Housing (factory provided). Then loosen the two nuts (Factory provided) holding the Driver Assembly with the Canopy.

1. Mount Canopy to Junction Box (screw by others). Make connections to Driver Assembly with the wires coming from the building.
- 2- Attach Strain-Relief and the Aircraft into the Driver Housing.
3. Thread aircraft cable through fitting so that end catches in top cable assembly.
4. Thread aircraft cable through holes of fitting at 3-way aircraft cable.
5. Slide strain relief over cord at canopy, snap closed install in canopy.
- 6- Reattach the Driver Assembly to the Canopy and make wiring connections to line voltage.
- 7- Bring the Driver Housing up to the Driver Assembly and reattach using factory provided hardware.

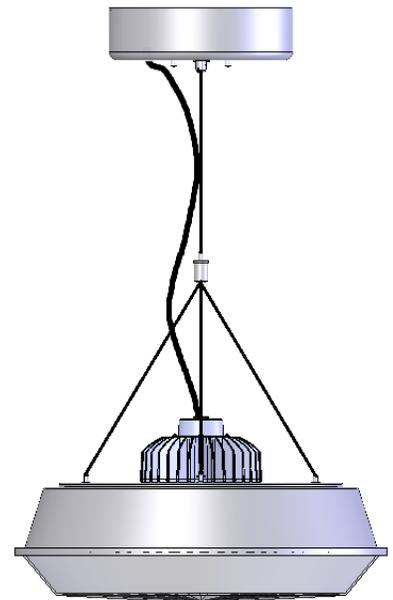



WARNING: Be certain all power is OFF! Wire according to local and national codes. This product should be installed by a qualified electrician.

Notes prior to beginning installation:

- A) Remove the (2) Securing Screws from the Canopy Housing.
- B) Loosen the (2) Nuts attaching the Driver Assembly to the Canopy Cover and slide off through the keyholes.
- C) Slide the Stem through the center Canopy opening install Stem to fixture, bringing conductors through Stem.

Installation Instructions:

1. Mount the Canopy Cover to the Junction Box (by others) through the keyholes in the Canopy Cover. Keyholes are for a standard 3.5" junction box.
2. Re-attach the Driver Assembly to the Canopy Cover using the (2) Nuts.
3. Make wiring connections between Junction Box & Drivers.
4. Thread Stem into Coupler through hole in Canopy Housing.
5. Make wiring connections between Stem & Drivers.
- Note: That the wire leads has labeling that must be followed.
6. Re-attach the Canopy Housing to the Driver Assembly using the (2) Securing Screws.

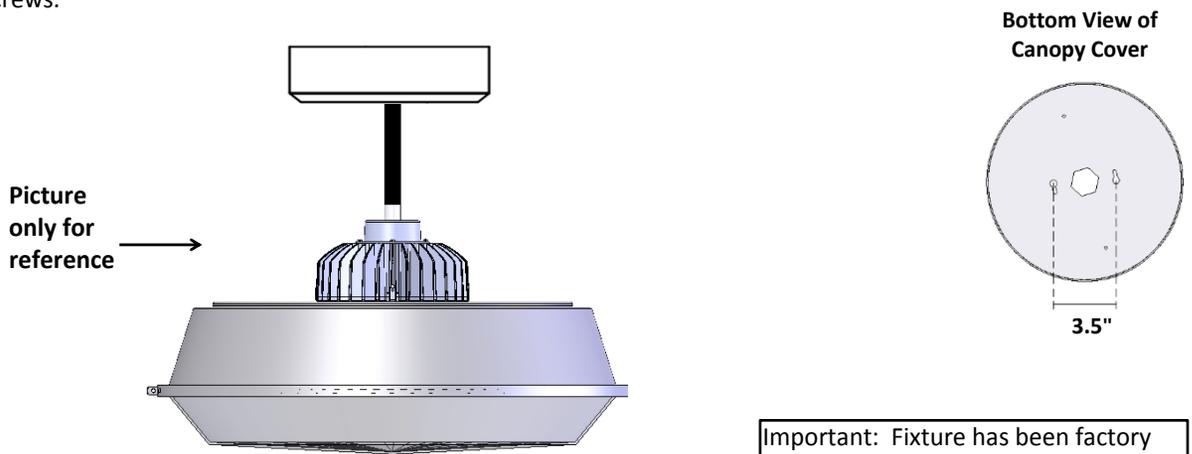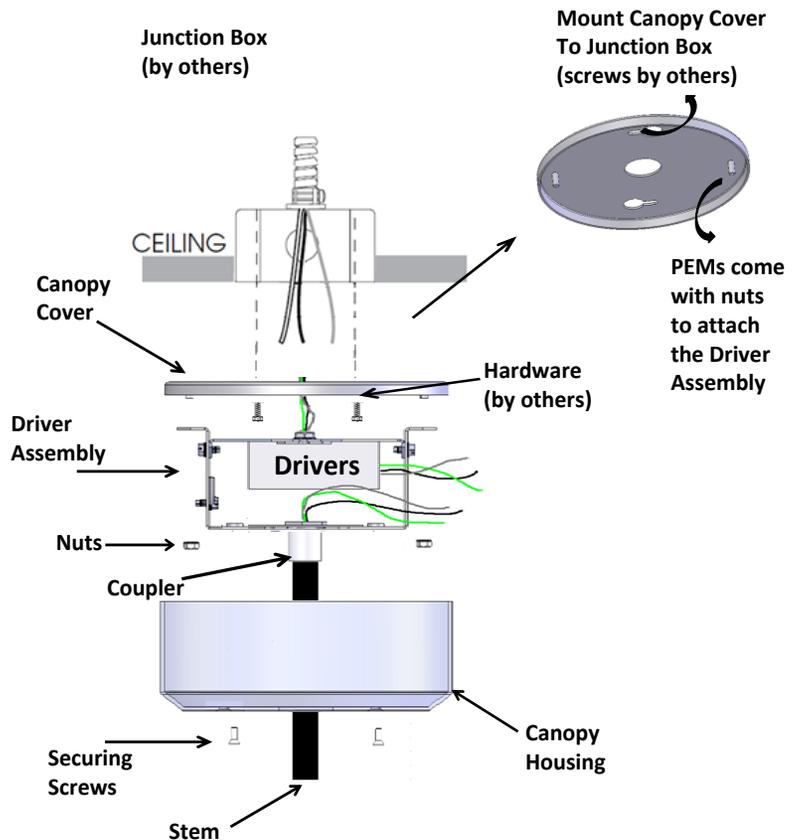

WARNING: Be certain all power is OFF! Wire according to local and national codes. This product should be installed by a qualified electrician.

Notes prior to beginning installation:

- A) Remove the (2) Securing Screws from the Canopy Housing.
- B) Loosen the (2) Nuts attaching the Driver Assembly to the Canopy Cover and slide off through the keyholes.
- C) Slide the stem through the center Canopy Housing opening install Stem to Fixture, bringing conductors through Stem.
- D) Thread Stem into Swivel Ball at top of stem.

Installation Instructions:

- 1. Mount the Canopy Cover to the Junction Box (by others) through the keyholes in the Canopy Cover. Keyholes are for a standard 3.5" junction box.
- 2. Re-attach the Driver Assembly to the Canopy Cover using the (2) Nuts.
- 3. Make wiring connections between Junction Box & Drivers.
- 4. Slide the Swivel Ball/Stem Assembly through the side of the Support Strap in the Driver Assembly, as shown in the Swivel Ball Detail.
- 5. Align the notch in the Swivel Ball with the tab in the Support Strap.
- 6. Allow the Swivel Ball/Stem Assembly to swing vertical.
- 7. Make wiring connections between Stem & Drivers.
- Note: That the wire leads has labeling that must be followed.
- 8. Re-attach the Canopy Housing to the Driver Assembly using the (2) Securing Screws.

Important: Fixture has been factory wired, ready for installation.

